

How to install Subwoofers in a car



Pete Deremer
South Side Stars
8/01/2004



First thing to do is to disconnect the battery. Then take out the fuse from your power wire. Next, put the power wire close to the battery, but do not connect it yet.



3) Run the power cable through a hole in the firewall (under the dash, next to the gas pedals, is where I have mine, however this will vary from car to car).



4) Find something similar to this that will just lift out of place, with some force, right next to where the car door closes.



5) After lifting this up, run the wire under it, you should get something like this. Run this wire, in any way possible, all the way to the trunk of your car.



6) Now for the remote wire and audio cable, take these wires and run them from your headunit, make sure you have an aftermarket headunit(these will make installation much easier), under your carpet to your passenger side door.




7) Do the same thing that you did on the drivers side.



8) Make sure you have the wires going to the trunk.



9) Before putting your box in your car, you have to get the subwo in it. First put some poly-fill in the box.

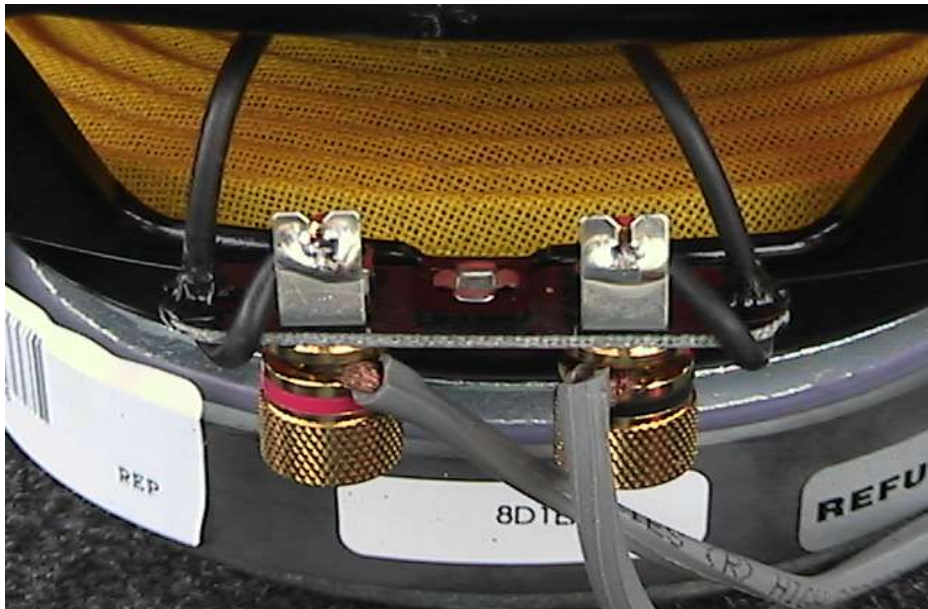

10) Hook up your wires to your sub, these will remain inside the box.



11) Next clamp these ends onto the end of the wire you just attached to they sub. Then attach them to like so inside the box.



12) Next, take the sub and put in the box and screw it in. when screw, always screw directly across from the screw you just put in. This is to get proper sealing.



13) It should now look like this.



14) Ok, on the back outside of the box, you'll find these, attach one end of a new wire to this.



14) Now clamp the ends on the end of the wire and attach it to the amp, like so.



15) Attach your audio plugs to your amp. Dont forget to plug in the remote,ground, and power cable also.



16) Now, to ground the amp. I grounded mine using the center rear seat bolt. You can use any bolt connected to the chassis though





17) Your done!